

Safety

1. To prevent possible hearing damage, do not listen at high volume levels for long periods.
2. Risk of explosion if battery is replaced by an incorrect type, dispose of battery according to the instruction.
3. Recycle your products

The WEEE logo (shown at right) appears on the product to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by transporting to an appropriate collection point for recycling of such hazardous waste.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following 2 conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

Eartec items are warrantied against defects in material and/or factory workmanship for a set period from the date of purchase. Standard repairs due to misuse or wear and tear, as well as replacement parts including but not limited to batteries, padding, USB cable, etc. are excluded. Shipping to Eartec is at customer's expense, Eartec will pay for return ground shipping if the product warranty applies to the repair. Call for details.

Shipping

Prior to returning your headset for warranty or service you must call Eartec for an RA (return authorization) number: 1.800.399.5994.

General Service

All repair work will be performed for the cost of replacement parts and return shipping from the Eartec factory.

Service / Eartec
145 Dean Knauss Drive
Narragansett, RI. 02882

www.eartec.com
1.800.399.5994



UltraLITE™ PRO16

EXCELLENT PERFORMANCE
Effective range up to 1/2 mile line of sight.

WEAR ON LEFT OR RIGHT EAR Mic boom swivels 270 degrees.

LITHIUM BATTERIES
Provide continuous 10 hr operation and are field replaceable.



Full Duplex Wireless System
Active Frequency Hopping



IMPORTANT



System includes (1) headset labeled “MAIN”.

This MAIN headset must be “ON” to link the corresponding Remote headsets.

Battery

All PRO16 are powered by a Lithium Polymer battery that will operate 10 hours when fully charged.

Charging

- 1) Batteries are charged via the multi-charger.
- 2) Insert the batteries making sure the contacts are properly aligned.
- 3) RED: Charging; GREEN: Fully Charged.



Installation

- 1) Press & slide battery door arrow to open & close compartment.
- 2) Insert battery - arrow indicates proper direction.



Low Indicator

- 1) A repetitive beep (every 20 seconds) indicates low power.
- 2) Battery should be charged or replaced.


To ensure optimum charge level remove battery when system not in use.

AutoMute Function



Boom swivels over the top 270 degrees. Headset can be worn on left or right ear.

Microphone mutes automatically when boom is set to “UP” position.

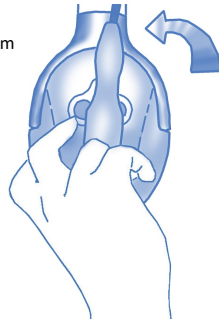

Operation

Each new PRO16 arrives pre-programmed. Should you need to add to your system please visit eartec.com/PRO16-programming.

Adjusting for Fit & Performance

- 1) Adjust the headband slide for size as necessary.
- 2) Position the microphone capsule at one finger's width from the corner of your mouth to ensure superior speech recognition and noise cancellation.
- 3) “TALK” identifies front of microphone: always have TALK facing towards your mouth.



Startup

- 1) Click the power button on the MAIN headset. Flashing green LED indicates power is ON.
- 2) Press the power button on the REMOTE headset(s).
- 3) 3) The LED on all headsets will flash & then turn solid green, indicating headsets have linked.

Note:

To turn off, press and hold the power button for 4-5 seconds. When LED blinks red, release. Remove battery for storage.

Set Volume

PRO16 features 5 volume settings. Select the desired volume by slowly clicking the UP or DOWN buttons. An audible tone reflects volume level. A double tone indicates low or max volume has been reached.

REMOTE ON/OFF



Channel Combine Switch

Two Channels of Simultaneous Talk

- 1) The PRO16 allows separate groups to speak privately on two separate channels.
- 2) Simply touch the yellow combine switch on the main headset to connect your entire crew into a full-duplex conference.
- 3) Press the button again to return to speaking in two separate groups.

